

PP10A8-50-1RU



Installation

1. This filter is designed to be plugged into a 10A power outlet. The equipment to be protected needs to be plugged into one of the devices sockets.
2. The unit should be placed in a location such that its cord and the equipment cords it is protecting do not cause any safety risk. Risks associated include, but are not limited to, tripping on the wall cord, tripping on the cords to the protected equipment or the unit and/or the protected equipment falling on people.
3. PP10A8-50-1RU feature an earth stud that should be electrically connected to the rack earth. Use a 6mm ring lug between the two flat washers to connect a length of wire to the unit. Do not undo the second nut.

Operation

1. Two LED indicators are present on all models. The 'Power' LED indicates the device has power at its input. The 'status' LED indicates the device is operating normally.
2. A fault condition is indicated by the 'Power' LED being lit and the 'Status' LED extinguished. If this happens the device should be returned to Novaris for repair or replacement.
3. The total load of all the connected equipment must be below the maximum load current (IL) at the nominal voltage (Uo) as stated in the specifications. In the event the unit overloaded, the resettable fuse on the left hand side of the unit will pop out. If this occurs, the cause of the overload should be found and removed. Once this has been performed, the fuse can be pressed to reset the unit for normal operation.